



# Manual

## SIL-9400

Product name

SIL-9400

Last Change

2.06.2022

Version

1.8

Author

J.Kalbitzer

Document revision

0.4

(c) scemtec Transponder GmbH 2022

## Contents

<b>1</b>	<b>General.....</b>	<b>5</b>
1.1	Care and Maintenance.....	5
1.2	RFID Systems.....	6
1.3	RoHS and WEEE Directives.....	6
1.3.1	RoHS.....	6
1.3.2	WEEE (Waste Electrical and Electronic Equipment).....	7
<b>2</b>	<b>Safety Informations.....</b>	<b>8</b>
<b>3</b>	<b>System Description.....</b>	<b>9</b>
<b>4</b>	<b>Quick Start.....</b>	<b>10</b>
4.1	Connection via Ethernet.....	10
4.2	Mounting.....	10
<b>5</b>	<b>Operating Modes.....</b>	<b>11</b>
5.1	Standard (Host) Mode.....	11
5.2	Stand alone Mode.....	11
<b>6</b>	<b>Software.....</b>	<b>12</b>
6.1	Software utilities.....	12
6.2	Firmware.....	12
6.2.1	Firmware Update.....	12
6.3	STX-ETX Interface protocol.....	12
6.4	Webserver.....	12
6.5	User Applications.....	13
6.5.1	Loading / Installing User Applications.....	13
6.5.2	User Application from sttID.....	14
6.5.2.1	SmartRead.....	14
<b>7</b>	<b>Hardware.....</b>	<b>16</b>
7.1	Voltage Supply.....	16
7.2	Interfaces.....	16
7.2.1	Ethernet.....	16
7.2.2	USB.....	16
7.2.3	RS 232.....	16
7.3	External Antenna.....	17
7.3.1	Calculating radiated power.....	17
7.4	Inputs and Outputs.....	18
7.4.1	Binary Inputs.....	18
7.4.2	Binary Outputs.....	18
7.4.3	IO connection example.....	19
<b>8</b>	<b>Specification.....</b>	<b>20</b>
8.1	Electrical specification.....	20
8.2	Power steps.....	21
8.3	Dimensions.....	22
<b>9</b>	<b>Delivery Scope &amp; optional Accessories.....</b>	<b>23</b>
9.1	Delivery Scope.....	23
9.2	Optional Accessories.....	23
9.2.1	Antennas.....	23
9.2.2	Antenna-holders.....	23

9.2.3	Connecting-cables.....	23
<b>10</b>	<b>Related Documents.....</b>	<b>24</b>
<b>11</b>	<b>Contact <i>sttID</i>.....</b>	<b>25</b>
<b>12</b>	<b>History.....</b>	<b>26</b>

## 1 General

The current firmware may not support all features described in this document or may behave differently as expected. This issues will be addressed by future version of the firmware. Additionally, the functionality described in this document may change without further notice in the future.

scemtec Transponder Technology GmbH (*sttID*) reserves the right to make changes or to discontinue its products or services at any time without notice.

*sttID* takes no responsibility for customer applications, products, or performance relating to systems or applications incorporating with *sttID* products.

Please note, that the user is responsible for conformity with regulation issues (e.g. radio approval), when using antennas not provided by *sttID* or using the system in countries, where the conformity with local regulations is not tested by *sttID*.

*sttID* assumes no liability and is not responsible for infringement of patents and/or any other intellectual or industrial property rights of third parties, which may result from assistance provided by *sttID*.

All other products mentioned in this document might be brands or brand names of the different suppliers.

### 1.1 Care and Maintenance

- Keep the device dry. Humidity and liquids contain minerals will corrode electronic circuits and tarnish transparent plastic parts. The device is not waterproof and should not be exposed to rain or moisture. Under extreme conditions, water may enter the circuitry.
- Avoid mechanical shocks. Handle the device with care. Shocks may break internal circuit boards.
- Take care not to scratch the device. Keep the device clean. When working with the device, use only *sttID*-approved accessories.
- Do not store or use the device in any location that is extremely dusty, dirty, damp or wet.
- Do not store in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics. Protect the device from extreme temperatures. For example, do not place the device in a windowed area where the sun may cause extreme temperatures, and keep it away from heaters and other heat sources.
- Do not store in cold areas. When the device warms up (to its normal temperature), moisture can form inside the device, which may damage electronic circuit boards.
- Do not attempt to open the device during operation, outside installation and maintenance periods. Non-professional handling of the device may damage it.
- Do not paint the device. Paint prevent proper operation. Paint with metallic contents may limit device performances.
- If the device or any accessory are not working properly, take it to your nearest *sttID*-Partner.

## 1.2 *RFID Systems*

As this technology is based on radio frequency, one must exercise the following operational and mounting instructions to achieve best performance:

- Metal affects radio signals. Normally the antenna has to be as far away as possible from any metal object and it's damping influence on the magnetic field. Only this leads to the best distribution of the magnetic field in the reading range. Very important as well is not to have "short circuits", in the vicinity of the antenna, damping the magnetic field. A "short circuit" is any metal near the antenna, building a "metallic ring", so that currents introduced by the RF-field can flow, absorbing the energy needed for the tag to operate.
- Care must be taken to reduce or eliminate unwanted signals (so called interference or noise) from external sources. The reading range may be reduced by following noise sources:
  - portable two way radio
  - cellular phones
  - switching power supplies
  - computer monitors
  - frequency converters (e.g. motor control systems)

Generally all cabling should be placed in sufficient distance from every potential noise source. However, in case of any problems additional noise suppression may be necessary (e.g. ferrites on cables). If needed, don't hesitate to contact *sttID* for additional installation guidance.

- The read range is depending upon
  - performance of the Reader
  - size of the antenna
  - size of the tag (the bigger the better)
  - orientation of the tag antenna plane to the Reader antenna plane
  - quality of the tag
  - matching of Reader antenna size and tag (-antenna) size
  - environmental, electrical noise
  - If influence of metal can not be fully avoided a tuning of the antenna is required and will improve reading range

## 1.3 *RoHS and WEEE Directives*

### 1.3.1 *RoHS*

*sttID* certifies that this product is compliant with the European Directive 2011/65/EU (RoHS II) for the restriction in Electrical and Electronic Equipment's (RoHS) of the use of the following hazardous substances:

- Cadmium
- Hexavalent Chromium

- Lead
- Polybrominated biphenyl flame retardants
- Polybrominated diphenyl ether flame retardants
- Mercury

This declaration is based on information provided by our suppliers and subcontractors.

### 1.3.2 WEEE (Waste Electrical and Electronic Equipment)



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2011/65/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities

## 2 Safety Informations

As with all electronic systems, the system described hereafter may not be used for any applications critical for maintaining safety. This means, the products may not be used in life support applications or any other life critical applications that could involve potential risk of death, personal injury or severe property or environmental damage.

The user/operator is solely responsible for any damages resulting from an improper or unintended utilization of the system.



### 3 System Description

This manual describes the 868 MHz LongRange Reader System SIL-9400, hereafter referred to as "Reader".

The 868 MHz Long range Reader System SIL-9400 is designed as a multi-tag system for reading and writing information stored on transponders (TAGs).

The operating frequency of 868 MHz permits a reading range up to 12 meters depending on antenna system and transponder type and size.

The Reader is designed for indoor usage only.

Transfer of data between the Reader and a host computer is possible via Ethernet, the configuration can be done via over the web interface.

Furthermore a "stand-alone" operation via user application is possible. This enables to transfer of data between the Reader and a host computer also via USB and an asynchronous RS232 interface.

The Reader is compatible with the standards EPC Class1 Gen.2 (ISO/IEC 18000-6c).

## 4 Quick Start

### 4.1 Connection via Ethernet

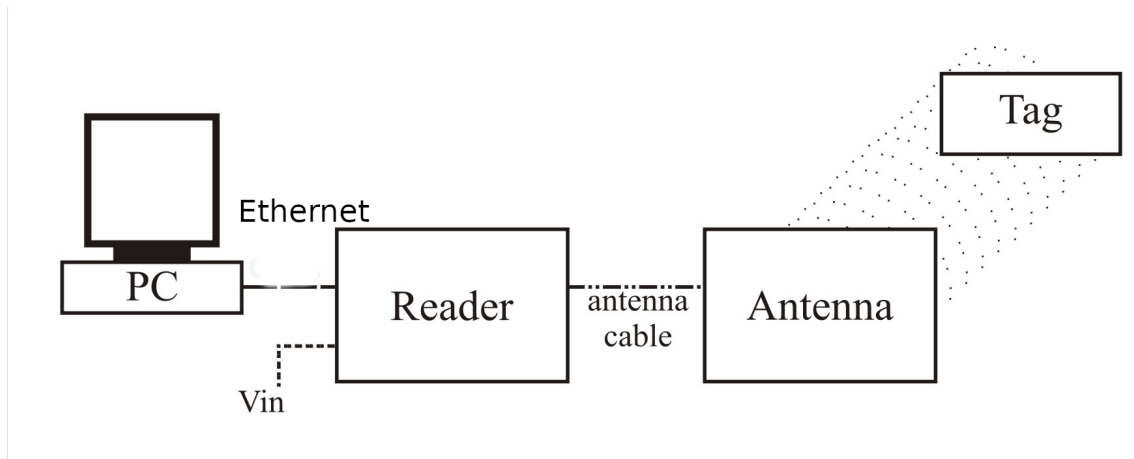


figure 1: System connection example

For example you can use the *sttID* antenna “SAT-A26/26-LR-P-UHF” [order-no.: 400.2626] . Now you can use a PC- demonstration software like “SimpleDemo” to control the Reader. For more details please refer to “Quick Start Guide read”. This Guide is available for download on [www.stt-rfid.com](http://www.stt-rfid.com).

### 4.2 Mounting

When mounting the Reader on a wall or ceiling, only the provided screw-holes has to be used. Fixing to the wall/ceiling has to be done with appropriate installation material (not included) using all of the foreseen mounting points.

For safety reasons and to complies the requirements regarding the regulations of the EN 62368-1 the Reader must be mounted to a wall/ceiling in the following two manners:

- **The Reader should not be installed more than 2 m above the ground**
- **The Reader should be mounted to a wall/ceiling in a way that it is guaranteed the interface-side of the Reader is not directed to the upturned- or top-side. Most likely one of the longer cover-sides without any connectors should be upstairs directed.**

When installing the Reader, please make sure that the maximum ambient temperature is not exceeded at any time. Therefore the Reader should only be installed in places where sufficient ventilation is assured. Any kind of possible heat accumulation should be avoided (e.g. the Reader should not be mounted in an additional housing or cabinet).

## 5 Operating Modes

### 5.1 *Standard (Host) Mode*

In standard mode the Reader is completely controlled by a Host system connected to the network interface via STX-ETX commands. For further information, please refer to the STX-ETX protocol description, which can be downloaded from [www.stt-rfid.com](http://www.stt-rfid.com).

STX/ETX access over USB oder serial port has to be implemented by a user application.

### 5.2 *Stand alone Mode*

The reader can be configured to run in stand alone Mode by uploading a user application using the web interface. This enables the reader to gather, process, store or display transponder data in a flexible way.

Users can develop their own user applications using the C# language based on the mono framework. For detailed information on application development, see the User Application Development Guide.

## 6 Software

### 6.1 *Software utilities*

Various software utilities for Windows for the Reader are available for download on [www.stt-rfid.com](http://www.stt-rfid.com) . Linux Versions are available on request.

Available Software utilities:

- SimpleDemo
  - Demo Software for easily controlling the Reader by a Host system.
- SMan
  - SMan can be used to scan the local network for connected sttID devices. It makes it easy to connect to the readers configuration webpage.

### 6.2 *Firmware*

The firmware of the Reader contains all basic functions for reading and writing tags of different manufacturers (air protocol), numerous control and configuration functions, as well as different diagnosis routines.

Firmware can be updated by the user via the web interface only. The latest Firmware files are available for download on [www.stt-rfid.com](http://www.stt-rfid.com).

#### 6.2.1 *Firmware Update*

The firmware can be updated via the web-interface.

Updating the firmware will be done on users risk.

Please take care not power off the reader while updating the firmware. Losing power during the update can destroy the reader.

### 6.3 *STX-ETX Interface protocol*

For communication with the Reader *sttIDs* STX-ETX protocol is used. The required STX/ETX protocol description can be downloaded from [www.stt-rfid.com](http://www.stt-rfid.com) .


A list of supported STX-ETX commands can be read out from the Reader via the STX-ETX command '100E' or via STX-ETX script 'Get Fn List.stx' (which will be installed together STX-Term software ).

### 6.4 *Webserver*

The SIL-9400 includes a web-server for firmware updates and maintenance which can be accessed using the devices IP-Address.

Default User Name: **admin**

Default Password: **admin**

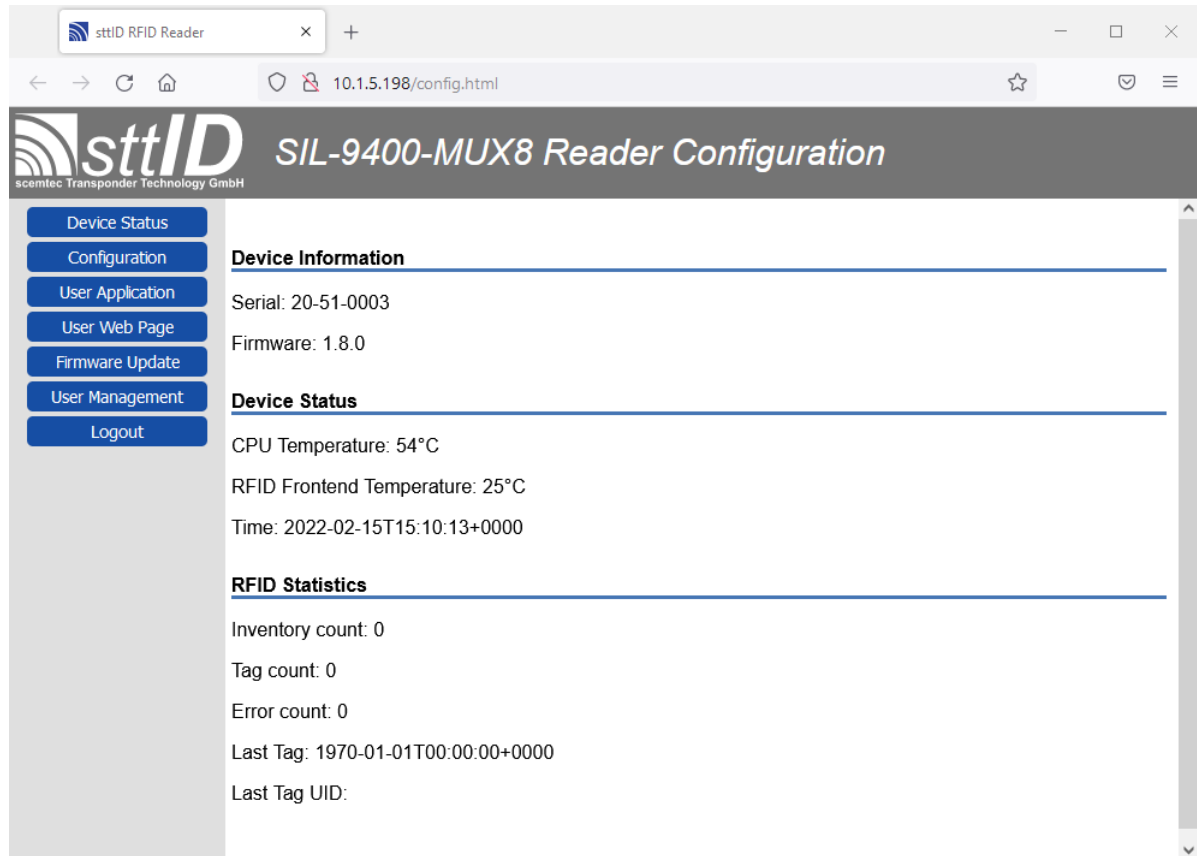


## 6.5 User Applications

It is possible to run own Applications on the reader. For developing own applications please read the “User Application Development Guide”.

### 6.5.1 Loading / Installing User Applications

The application can be installed by opening the readers a web page and login as an administrator. The ZIP file with the application can be uploaded in the “User Application Menu” and will be installed and started automatically after clicking the install button.

The “User Application View” mirrors the output from the user application to a display or monitor. This can be helpful for remote maintenance.

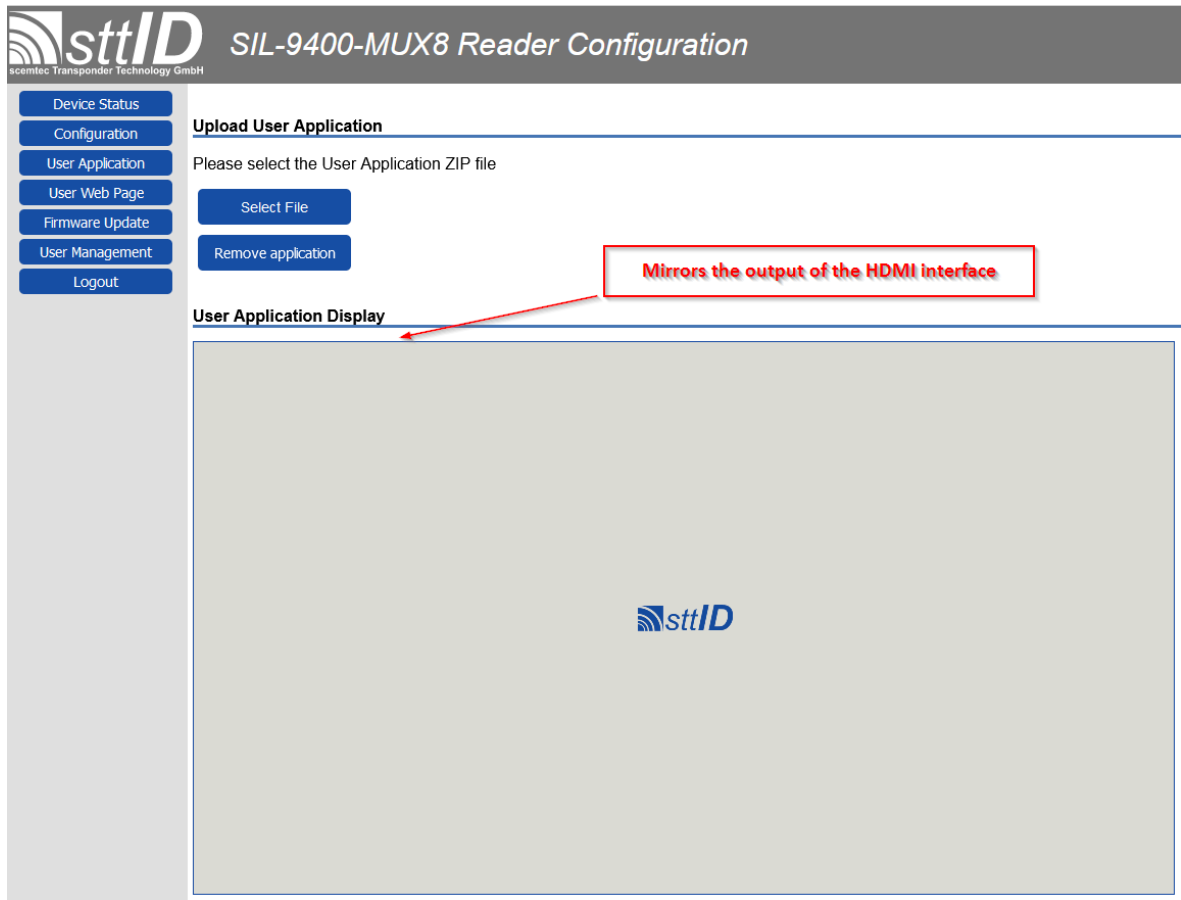

## 6.5.2 User Application from sttID


Following User Applications from sttID are available:

### 6.5.2.1 SmartRead

This App has been designed as an extension aimed to be used as an autonomous controller and protocol interface to be placed between an sttID RFID device and an arbitrary host system, hiding the STX/ETX protocol layer and providing standard ASCII terminal/telnet output in a highly configurable way. It also supports full stand-alone functionality without any connection to a host system (“headless” operation), e. g. an alarm triggered by tag detection.

The function can be configured by using the web-interface.

The configuration website can be reached after installation of the app by entering the readers IP Address.

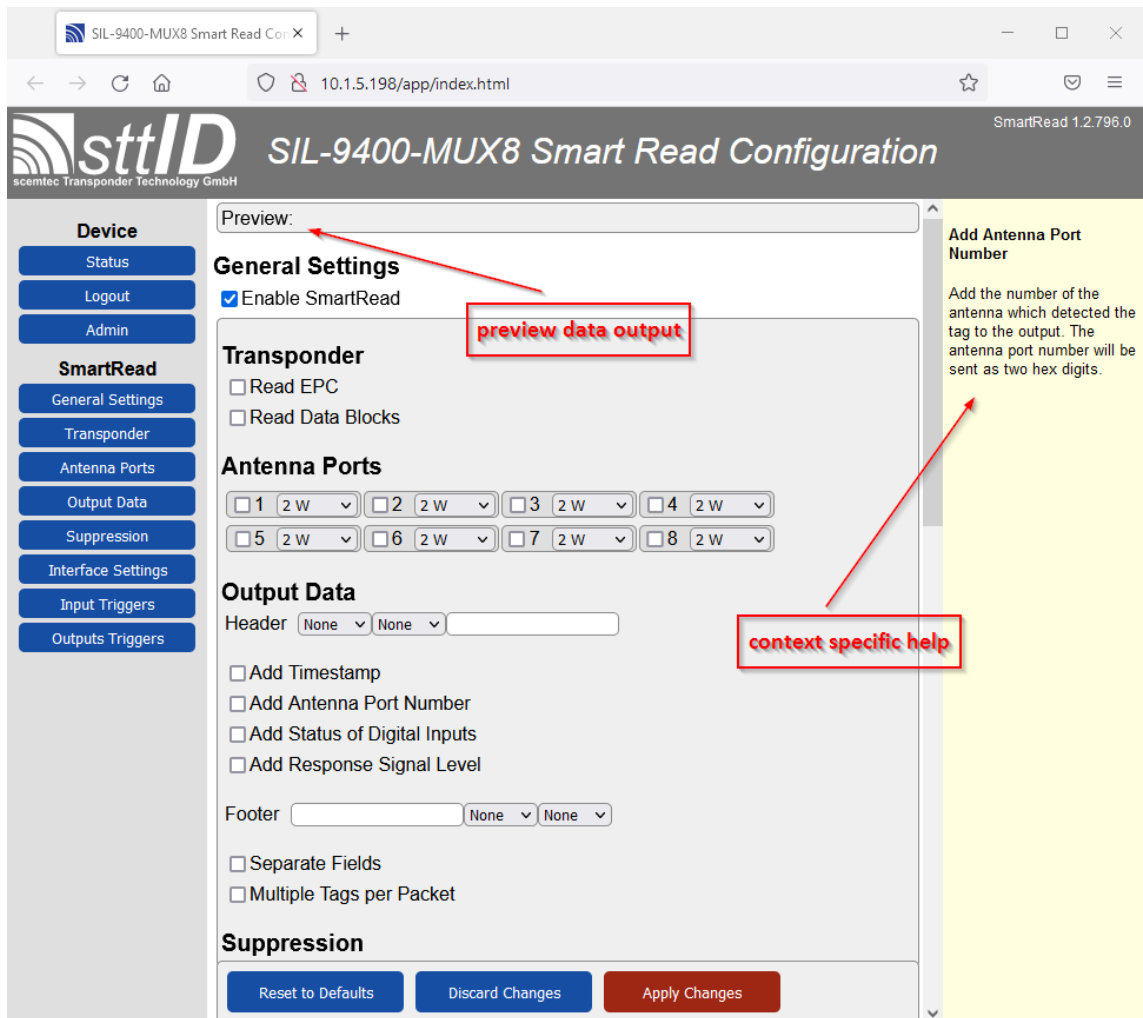

The screenshot shows the 'SIL-9400-MUX8 Smart Read Configuration' web interface. The browser address bar shows '10.1.5.198/app/index.html'. The page title is 'SIL-9400-MUX8 Smart Read Configuration' and the version is 'SmartRead 1.2.796.0'. The interface is divided into a sidebar and a main content area.

**Sidebar:**

- Device:** Status, Logout, Admin
- SmartRead:** General Settings, Transponder, Antenna Ports, Output Data, Suppression, Interface Settings, Input Triggers, Outputs Triggers

**Main Content Area:**

- Preview:** A text input field for previewing data output.
- General Settings:**
  - Enable SmartRead
- Transponder:**
  - Read EPC
  - Read Data Blocks
- Antenna Ports:** Eight dropdown menus for selecting antenna ports (1-8), each with a '2 W' label.
- Output Data:**
  - Header: Two dropdown menus (both set to 'None') and a text input field.
  - Add Timestamp
  - Add Antenna Port Number
  - Add Status of Digital Inputs
  - Add Response Signal Level
  - Footer: A text input field and two dropdown menus (both set to 'None').
  - Separate Fields
  - Multiple Tags per Packet
- Suppression:**
  - Buttons: Reset to Defaults, Discard Changes, Apply Changes

**Annotations:**

- A red box labeled 'preview data output' points to the Preview field.
- A red box labeled 'context specific help' points to the right-hand side of the interface.

**Help Text:**

**Add Antenna Port Number**  
Add the number of the antenna which detected the tag to the output. The antenna port number will be sent as two hex digits.

## 7 Hardware

### 7.1 Voltage Supply

The Reader is designed for a voltage supply connectible via a standard 2.1-mm barrel connector.



The Reader may only be connected to a power supply within an output current-value of 1.5-2.5 A and which is tested for safety requirements according to appropriate standard (e.g. EN62368-1) with max. PS2-Power.

A suitable wall plug power supply is available as optional accessory. For best performance and safety, *sttID* strongly recommends to use only this power supply.

### 7.2 Interfaces

For communication with a host device (e.g. PC), the Reader provides three interfaces (RS232, USB, Ethernet). The Reader can also be configured to operate in stand-alone.

The interfaces are intended to be used only with connection cables not longer than 3m.

It's strongly recommended to use only one interface at the same time.

STX/ETX access is only possible via network interface.

#### 7.2.1 Ethernet

The Reader is equipped with a 10/100 T-Ethernet interface.

By default the Reader gets its IP Address via DHCP.

Nevertheless the Reader can also be configured with a static IP Address.

#### 7.2.2 USB

The Reader is equipped with a USB Host and a USB device interface.

All USB interfaces can be accessed by the user application.

Supported profiles for USB device interface	CDC-ACM (virtual COM-Port), HID (Keyboard emulation)
---	--

#### 7.2.3 RS 232

The Reader is equipped with a RS232 interface. The connection is made via a standard 9 pin D-Sub connector.

Terminal designation	SUB-D Connector Pin	Terminal Function
TxD	2	Transmit Data
RxD	3	Receive Data
GND	5	Ground

The data transfer rate is adjustable via STX-ETX commands.



Configuration	8 Data Bits, 1 Stop Bit, no Parity, no flow control
Supported Data Rates [baud]	9600, 19200, 38400 57600, 115200 (default), 230400

### 7.3 External Antenna

The Reader is only operational with external antenna(s).

Some key parameters of the such as reading range for example depends on the used antenna, the used transponder type, size and quality, and the resulting magnetic coupling between the transponder resonant circuit and the transmission/receiver antenna.

The MUX Version of the Reader has an integrated 4-channel antenna multiplexer, so up to 4 antennas can be connected to the Reader. The user can select each connected antennas via software commands.

The Reader is equipped with SMA antenna connectors. For using with N connectors, SMA-N Adapters are available from *sttID*.

#### 7.3.1 Calculating radiated power

The radiated power according to ETSI standard EN 302 208 of a system consisting of reader, cable and antenna can be calculated using the following equation:

$$P_{e.r.p\_dBm} = 10 \log (P_{conducted}) - D_{cable} + G_{ant\_dBd}$$

with

- $P_{e.r.p\_dBm}$ : Radiated power relative to a half-wave dipole [dBm]
- $P_{conducted}$ : Conducted output power of the Reader [mW]
- $D_{cable}$ : Damping of the antenna connection cable [dB]
- $G_{ant\_dBd}$ : Antenna gain relative to half wave dipole [dBd]

Remark:

Antenna gain is usually specified relative to an isotropic antenna in dBi ( $G_{ant\_dBi}$ ).

The antenna gain relative to half wave dipole can be derived by the following equation:

$$G_{ant\_dBd} = G_{ant\_dBi} - 2,15 \text{ dB}$$

Since the measurement of the radiated power defined in EN 302 208 is based on linear antennas, the radiated power of a circular polarized antenna measured with a linear test-antenna according to EN 302 208 will be 3 dB less.

Therefore an additional amount of 3 dB can be added in the calculation when using a circular polarized antenna.

Example:

Calculating the permitted power step for usage in ETSI region for a system consisting of the following STT devices:

- Antenna SAT-A12/12-P-868MHz: (gain 5,5 dBi, beam width 100°, circular polarized)
- Cable CABLE-UHF-12m-SMA-N (damping typ. 3,2 dB)

For this system setup the permitted radiated power  $P_{e.r.p.}$  according to EN 302 208 would be  $1\text{ W} = 30\text{ dBm}$ .

This leads to:

$$P_{\text{conducted\_max}} = 10^{(30\text{ dBm} + 3,2\text{ dB} - 5,5\text{ dBi} + 2,15\text{ dB} + 3\text{ dB})/10} = 1927\text{ mW}$$

For this example the maximum permitted conducted power is higher than the highest power step of the reader so the maximum power step may be selected.

Using the shorter 6m CABLE-UHF-6m-SMA-N with a typical damping of 1,6 dB instead of 12 m cable, the analogue calculation would give a permitted output power:

$$P_{\text{conducted\_max}} = 10^{(30\text{ dBm} + 1,6\text{ dB} - 5,5\text{ dBi} + 2,15\text{ dB} + 3\text{ dB})/10} = 1333\text{ mW}$$

In this case the output power of the reader has to adjusted to at least power step 13 to meet the restrictions of EN 302 208. With respect to system tolerance it is recommended to add some margin, so power step 12 would be a good compromise in this case.

Nevertheless the reader could still be used with maximum power step in this setup.

## 7.4 Inputs and Outputs

### 7.4.1 Binary Inputs

Two binary inputs are available for customer-specific tasks. Both inputs are accessible with indirect-connected opto-couplers and screw terminals (see terminal description below).

The state of both binary inputs must be imported unambiguously via software command.

In stand alone mode (Smart Read) the behaviour of the Inputs can be configured freely (e.g. trigger Read event).

Terminal assignment:

Input designation	Terminal designation	Internal opto-coupler assignment
Input 1	I1 + (A)	Anode of the opto-coupler input 1
	I1 – (K)	Cathode of the opto-coupler input 1
Input 2	I2 + (A)	Anode of the opto-coupler input 2
	I2 – (K)	Cathode of the opto-coupler input 2

All screw terminals are clearly marked with their specific designation at the terminal. The screw terminals accepts wires of maximum conductor cross-section of 2.5mm<sup>2</sup>.

The electrical data can be found in the table 'electrical specification'.

### 7.4.2 Binary Outputs

Two binary outputs in the form of potential-free contacts are available for customer-specific tasks. Both outputs are accessible with indirect-connected relays and screw terminals (see terminal description below). They are freely configurable via software commands.

In stand alone mode (Smart Read) the behaviour of the outputs can be configured freely (e.g. Change state when TAG is read).

Terminal assignment:

Output designation	Terminal designation	Internal assignment
O1	—	Contacts of the potential-free Output-port 1
O2	—	Contacts of the potential-free Output-port 2
O3	—	Contacts of the potential-free Output-port 3
O4	—	Contacts of the potential-free Output-port 4

All screw terminals are clearly marked with their specific designation at the terminal. The screw terminals accepts wires of maximum conductor cross-section of 2.5mm<sup>2</sup>.

The electrical data can be found in the table 'electrical specification'.

### 7.4.3 IO connection example

The following schematic is an example how to connect the Inputs and Outputs.

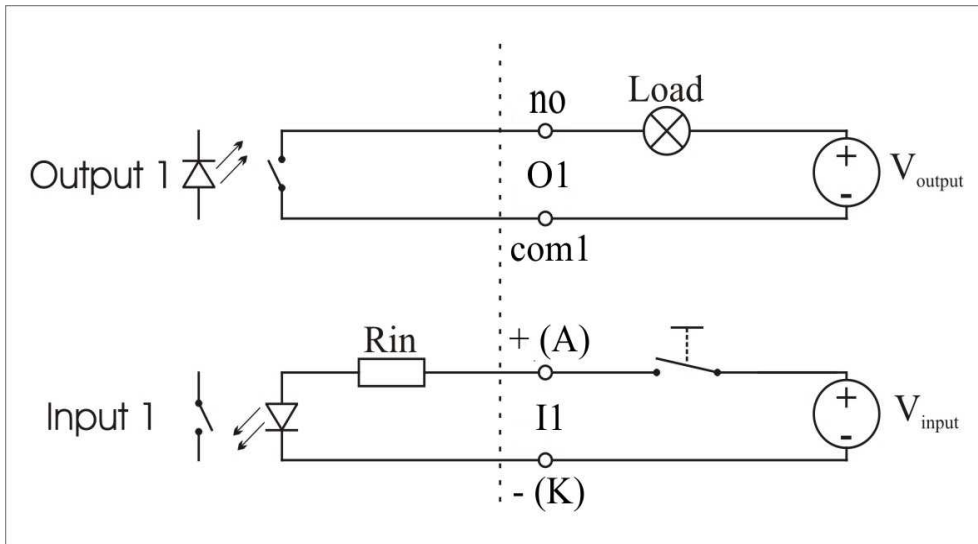


figure 2: IO connection example

## 8 Specification

### 8.1 Electrical specification

Electrical specification (Ambient temperature: 25°C)						
Parameter	Test condition	Symbol	Min.	Typ.	Max.	Unit
DC input voltage	—	$V_{in}$	12	—	24	V
Current consumption	$V_{in} = 24\text{ V}$	$I_{in}$	—	tbd	—	mA
Operating frequency	—	$f_{RF}$	865	—	868	MHz
Maximum RF power @ 50 Ohm load	SIL-9400	$P_{conducted}$	- 1db	tbd	+ 1db	mW
Input voltage binary inputs I1/I2	—	$V_{input}$	6.5	12	30	V/DC
Input current binary inputs I1/I2	$V_{input} = 12\text{ V/DC}$	$I_{input}$	—	11	—	mA
Series resistors binary inputs I1/I2	—	$R_{in}$	950	1000	1050	Ohm
Output switching voltage binary outputs O1 - O4	—	$V_{output}$ (AC/DC)	—	—	60	V AC/DC
Output switching current binary outputs O1 - O4	—	$I_{output}$	—	—	500	mA
Output power dissipation binary outputs O1 - O4	—	$P_{output}$	—	—	800	mW
On resistance binary outputs O1 - O4	—	$R_{on}$	—	1	—	Ohm
Operating (ambient) temperature range	—	$T_{amb}$	-10	—	50	°C
Storage temperature range	—	$T_{stg}$	-20	—	70	°C

## 8.2 Power steps

The output power of the Reader can be set in 15 steps.

Power step	Output power conducted [mW] @ 50 Ohm load (typical values @ 20 C)	
	SIL-9400	
15	tbd	
14	tbd	
13	tbd	
12	tbd	
11	tbd	
10	tbd	
9	tbd	
8	tbd	
7	tbd	
6	tbd	
5	tbd	
4	tbd	
3	tbd	
2	tbd	
1	tbd	

**Attention:**

National regulations regarding radiated power has to be considered, when setting the output power. The user is solely responsible to observe legal restrictions for the radiated power for the combination of reader, cable and antenna.

For example: In countries in which the ETSI standard EN 302 208 is applicable, the permitted radiated power depends on the characteristics of the attached UHF-antenna

Antenna beam width	Permitted max. radiated power according to EN 302208 [W e.r.p.]*
> 180 degrees	0,5
180 – 90 degrees	1
< 90 degrees	2

**\* values without engagement, please refer to actual versions of EN 302 208 currently valid limits**

Please refer to chapter 7.3.1 for details on calculating the radiated power.

### 8.3 Dimensions

An aluminium housing protection type IP 20 (in acc. with DIN EN 60529) is used. This housing is equipped with two lateral covers attached with screws. For mounting the mounting latches can be used.

Dimensions	
Width	190 mm
Height	112 mm (without connectors 104 mm)
Depths	42 mm

Weight	
Without package	tbd

Environment	
Protective Systems	IP20

## 9 Delivery Scope & optional Accessories

### 9.1 *Delivery Scope*

SIL-9400 Long-Range system

### 9.2 *Optional Accessories*

For the SIL-9400 system a suitable wall plug 24 V =DC power supply as optional accessory is available and contactable to the SIL-9400 over a 2.1-mm standard barrel connector.

#### 9.2.1 *Antennas*

SAT-A12/12-P-868MHz 120\*120 mm circular 5,5 dBi, 100° [order-no.: 400.2018]

SAT-A26/26-LR-P-UHF-cir 260\*260 mm circular 9,0 dBi, 70° [order-no.: 400.2626]

#### 9.2.2 *Antenna-holders*

MOUNT-A12/12-P-UHF [order-no.: 999.0129]

MOUNT-A25/25-LR-P-UHF [order-no.: 999.0467]

#### 9.2.3 *Connecting-cables*

CABLE-UHF-3m-SMA-N length 3 meters [order-no.: 999.0346]

CABLE-UHF-6m-SMA-N length 6 meters [order-no.: 999.0132]

CABLE-UHF-12m-SMA-N length 12 meters [order-no.: 999.0153]

## 10 Related Documents

- QuickStart Guide
  - Short introduction for using the with UniDemo
- Quick guide to STXETX-protocol
  - Short introduction of basic structure of STX-ETX protocol
- STX/ETX Protocol description
  - Detailed Description of command structure and available commands for controlling the with a Host system
- C# Demo with source code
  - Example code for integrating the in your own application software
- User Application Development Guide
  - Detailed description of development process of user applications

All documents are available for download on [www.stt-rfid.com](http://www.stt-rfid.com).



## 11 Contact *sttID*

scemtec Transponder Technology GmbH  
Wehrstr. 1  
D-51645 Gummersbach

Phone: + 49 (0) 22 61 / 80407 - 0  
Fax: + 49 (0) 22 61 / 80407 - 55  
e-Mail: [info@stt-rfid.com](mailto:info@stt-rfid.com)  
website: [www.stt-rfid.com](http://www.stt-rfid.com)

If you have any questions about our products, please do not hesitate to call us. Our specialists are always available for you and will provide professional support to find a solution to your specific problem.

## 12 History

Rev.	Changed by	Date	Description
0.0	J.Kalbitzer	28.02.2020	– Initial Version
0.1	C. Pauls	04.03.2020	– Added Stand alone mode description – Removed inapplicable values from specification – Fixed mechanical specifications – Added Preliminary watermark
0.2	J.Kalbitzer	7.2.2022	– Added description “User Defined Applications”
0.3	J.Kalbitzer	15.2.2022	– Some fixes on and explanations on interfaces and software.
0.4	J.Kalbitzer	2.6.2022	– Preliminary removed – minor changes
			–